



Ultravation®  
**SOLARIS®**

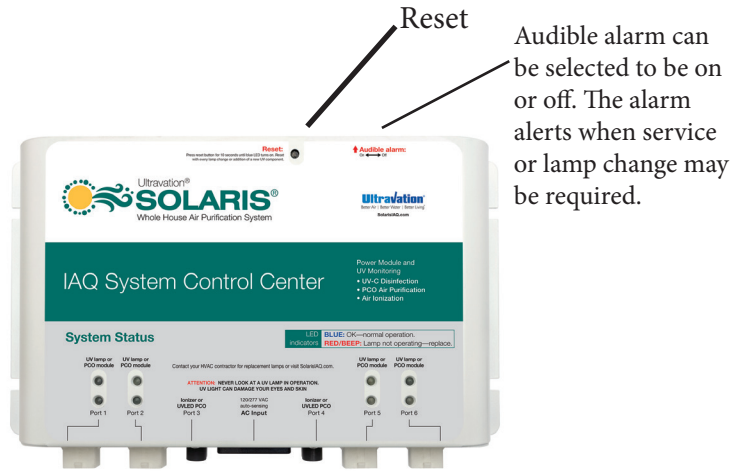

**Note:** You must reset the service indicator light after each lamp replacement or adding any new device. With the power on press and hold the RESET button for 10 seconds using a non-metallic implement. The LED should turn blue while the button is depressed. Release the RESET button, and the LED should remain blue.

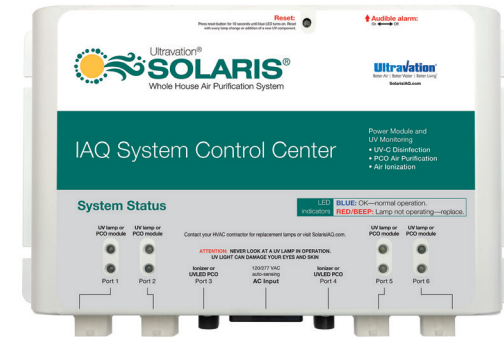

**Warranty:**

This power module (manufactured by Ultravation, Inc) is covered by an unlimited Lifetime Warranty. This warranty does not include damage to the unit from accident, misuse or improper installation. If this product should become defective, Ultravation will elect to repair or replace the product free of charge. Ultravation will return repaired or replaced warranted products pre-paid to the customer, provided that the product was delivered pre-paid. Ultravation shall have no responsibilities for charges incurred by the customer for installation or removal of warranted items. Liability is limited only to the replacement or repair of this product. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. All returns must be accompanied by a return authorization number, which may be obtained by contacting Ultravation, Inc.

*Installation and  
 Owners Manual*

IAQ Power Module  
 SLX-PowerPro-4-LV

Supports the following accessories:

- SLX-PG5T
- SLX-AAL-12
- SLX-AAL-14
- SLX-AAL-17
- SLX-AAL-PCO
- SLX-AAL-CAT

**Ultravation, Inc.**  
 67 Tubbs Av, Brandon, Vermont 05733 Phone: 1-866-GO-UV-AIR (468-8247) • Fax: 802-287-9203  
 www.ultravation.com • info@ultravation.com  
 Copyright © 2025 Ultravation, Inc. Doc- DC-OM-SLXPP REV 3



### Package Contents:

- One Solaris IAQ Module
- One Power Cord
- 4 Mounting Screws 3/4"
- Warranty registration card

### Electrical Requirements:

**120 /277 VAC auto sensing 50/60 Hz. 1.4 Amps.**

**This power module works with all SOLARIS upgrade modules and Ultravation EZ-light 6P products.**

**Customize your indoor air quality needs by adding any or all of these accessories.**

To learn more please visit [Solarisiaq.com](http://Solarisiaq.com)



SLX-AAL-12 -12"lamp  
SLX-AAL-14 -14"lamp  
SLX-AAL-17 -17"lamp



SLX-AAL-PCO




SLX-AAL-CAT

Solaris IAQ system overview

## Solaris IAQ Systems


IAQ components strategically placed in the HVAC system operated by a central Power Module

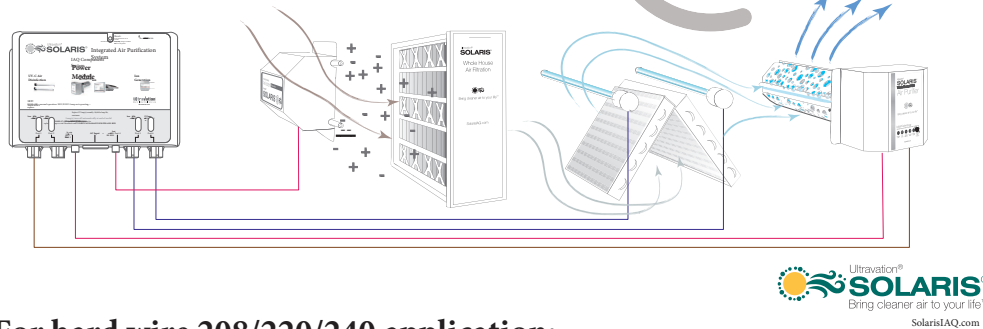

**For hard wire 208/220/240 application:**

**Turn off main power. Turn breaker off on HVAC Unit**

- Cut the 110 plug off from supplied cable.
- Remove black jacket 4-5" do not nick wires.
- Strip wires Black/White/ Green 3/8" back.
- Recommended mark white wire with red electrical tape.
- Route wire through an appropriate knockout.
- Use proper strain relief around black jacket to HVAC enclosure.
- Connect green wire to ground - use of ground lug (not supplied) may be required.
- Connect remaining wires one on each side of the exit side of the HVAC Breaker.
- Connect black cord to power pack (pack is auto sensing on power)
- Replace any removed panels and screws.
- Apply power / turn on breakers.

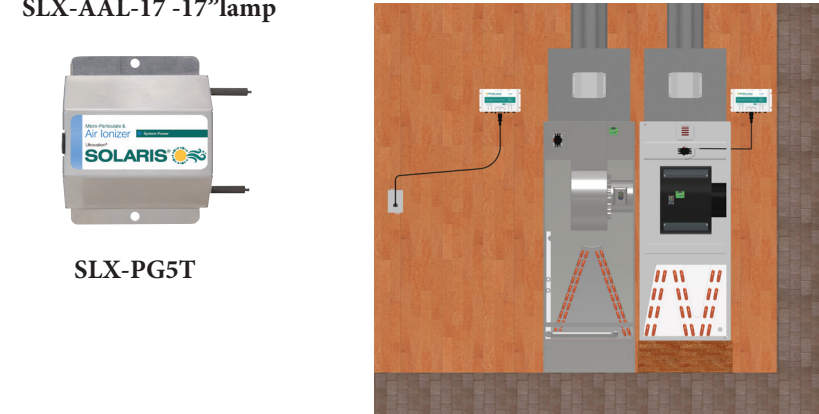

SLX-PG5T

